

INSTALLATION AND OPERATION MANUAL


GAS TILTING KETTLES

MODELS: ACGLT-20

ACGLT-30

ACGLT-40

ACGLT-60

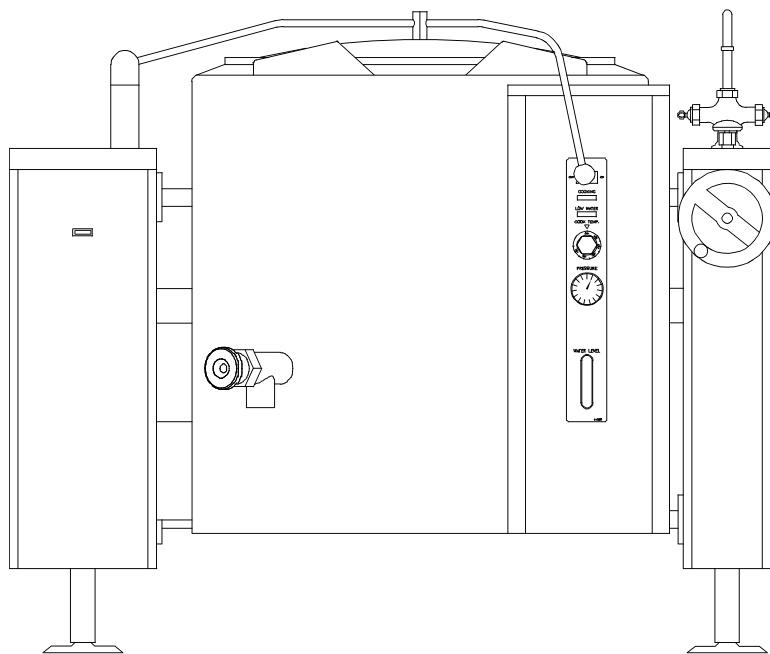

ACCUTEMP PRODUCTS, INC

8415 North Clinton Park Dr. Fort Wayne, IN 46825
800 210-5907 OFFICE · 260 493-0415 · accutemp.net

INSTALLATION AND OPERATION MANUAL, GAS TILTING KETTLES,
MODELS ACGLT-20, ACGLT-30, ACGLT-40, ACGLT-60

IMPORTANT NOTES FOR INSTALLATION AND OPERATION



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



FOR YOUR SAFETY: Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.



WARNING: Improper installation, operation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing, operating or servicing this equipment.

PURCHASER: Instructions to be followed in the event that the operator of this appliance smells gas must be posted in a prominent location. This information shall be obtained by consulting the local gas supplier.

**Do not obstruct the flow of combustion and ventilation air.
Keep the appliance area free and clear from combustibles.
Adequate clearances must be maintained for servicing and proper operation.**

Do not attempt to operate this unit in the event of a power failure.

Intended for commercial use only. Not for household use.

This manual should be retained for future reference.

INSTALLATION AND OPERATION MANUAL, GAS TILTING KETTLES,
MODELS ACGLT-20, ACGLT-30, ACGLT-40, ACGLT-60

TABLE OF CONTENTS

DESCRIPTION	PAGE
Important Notes For Installation and Operation	2
1.0 Service Connections	4
2.0 Installation	5
3.0 Operation	10
4.0 Cleaning Instructions	16
5.0 Maintenance	20
6.0 Service	21
7.0 Troubleshooting	26
Appendix A, Material Safety Data Sheet	28

